

UV Lighted Bollard Cover Installation Instructions

What You Will Receive:

- Designated number of Bollard Covers
- Two pieces of neoprene tape for each Bollard Cover

Installation Instructions:

Step #1

- Remove the back of the first adhesive tape strip
- Wrap it firmly around the top of the post, approximately 6" from the top
- Make sure to leave a 1" gap between the ends of the tape to allow airflow while installing the cover




Step #2

- Remove the back of the second adhesive tape strip
- Wrap it firmly around the bottom of the post, approximately 6" from the bottom
- Do not leave a 1" gap this time around, make sure ends of tape connect

Step #3

- With the tape in place, slowly slide the Ideal Shield Bollard Cover over the post.
- If the tape is applied correctly, you will hear air being forced out while sliding it down the post, creating a vacuum seal.
- The Ideal Shield Bollard Cover is now secure over the pipe.

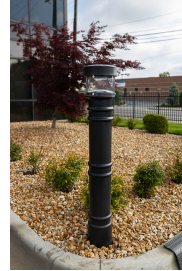

Step #4

- Remove protective bubble wrap and protective tape over solar panel before use.
- To Access On/Off Switch & Batteries: Remove the three gray caps (top or bottom) on the glass, use a screwdriver to remove screws. Assets are located in top piece. Batteries are (2) NiMH AA.

(877) 392-5766

Need help? Call or Email.

info@trafficprotectors.com

8:30 am to 5:00 pm M-F ET

TRAFFIC PROTECTORS

Protecting People and Property